

# SEALANT & ADHESIVE REMOVER SPRAY

## Features

PETEC sealant & adhesive remover dissolves and removes persistent sealant and adhesive residues as well as paints and varnishes. Can also be used to remove sealant residues (paper, cork, rubber and silicone) from surface and flange connections such as valve covers, cylinder heads, oil pans, exhaust manifolds, front covers, water pumps, thermostats, gearboxes and other parts.

- Removes persistent residues
- mega cleaning power
- intensive and profound cleaning action, even on vertical surfaces.
- silicone-free
- removes sealant and adhesive residues based on silicone, epoxy resin, polyurethane, MS polymer, butyl rubber, cyanoacrylate, anaerobic and various 2-component products
- removes silicone contamination on the bonding surface of windscreens

## Areas of application

PETEC sealant & adhesive remover dissolves and removes persistent sealant and adhesive residues as well as paints and varnishes. Can also be used to remove sealant residues (paper, cork, rubber and silicone) from surface and flange connections such as valve covers, cylinder heads, oil pans, exhaust manifolds, front covers, water pumps, thermostats, gearboxes and other parts.

## TechnicalData

Colours	Translucent
Shelf life	36 Months

## Usage Instructions

Shake can well before use. Spray on the surface from a distance of approx. 20 cm and let it act (contact time depends on the application and degree of soiling). Then wipe off with a clean cloth. Repeat the procedure several times in case of heavy soiling. Thoroughly clean and degrease the surfaces with PETEC Multi Cleaner (item no. 82200 or 82100) before the sealant or adhesive is reapplied. Before use, check the material for colour fastness and material compatibility in a hidden spot. After use, turn the can upside down and spray until the valve is empty. Read the safety and technical data sheet. (Download the PETEC data sheets at [www.petec.de](http://www.petec.de))

### Package Sizes



**Item no.: 82150**

500 ml